

Sprocket Removal/Replacement

Tools Required:

One way clutch nut

Vice

1. Follow procedures in separate sheet 'Axle Removal/Replacement.'
2. Hold sprocket in vice.
3. Using one way clutch nut turn axle anticlockwise.
4. Remove sprocket by hand.

Note: It is advised to replace 17mm bearing and R8 bearing.

5. Remove R8 bearing.

Reverse procedure to refit. Sprocket can be tightened by hand. Do not tighten in vice.

